
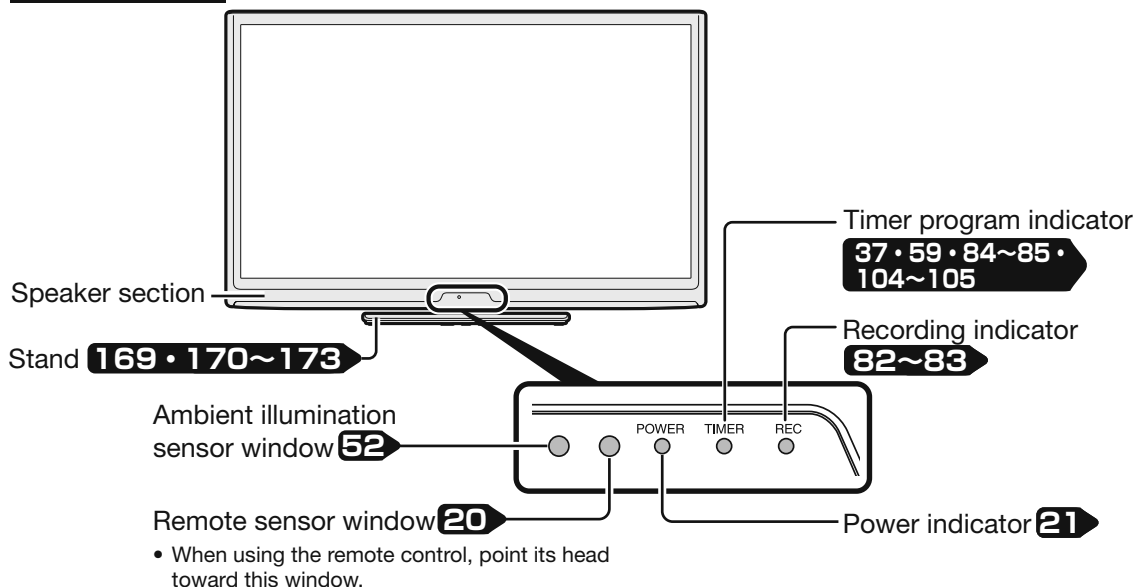


English Guide

Part Names

- The numbers shown in the  symbols are the page numbers where part functions and/or use are explained in Japanese.


Front view



Adjusting the LCD panel angle (LC-46V7/LC-40V7/LC-32V7)

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.



Left side view

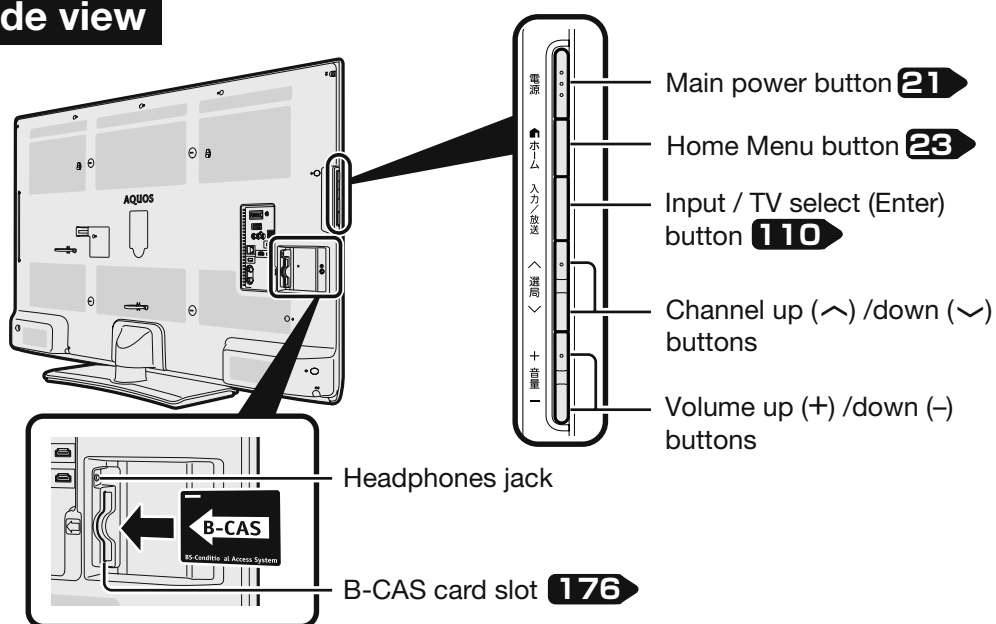

Back view

The illustrations below are those of LC-46V7.

LC-40V7/LC-32V7/LC-26V7 has the same layout of jacks and terminals as LC-46V7.

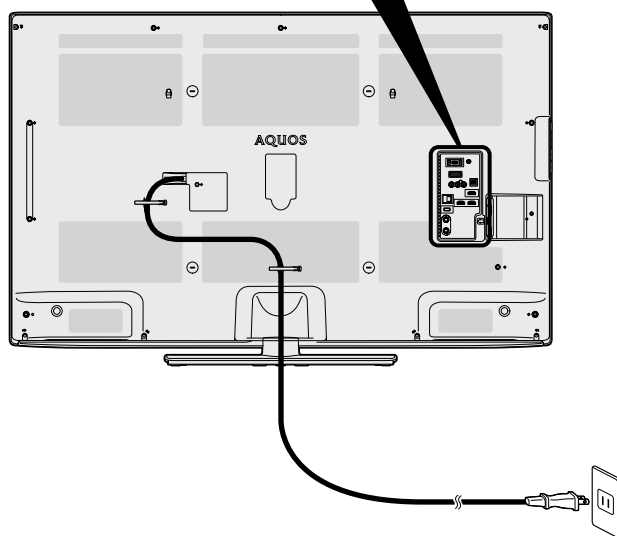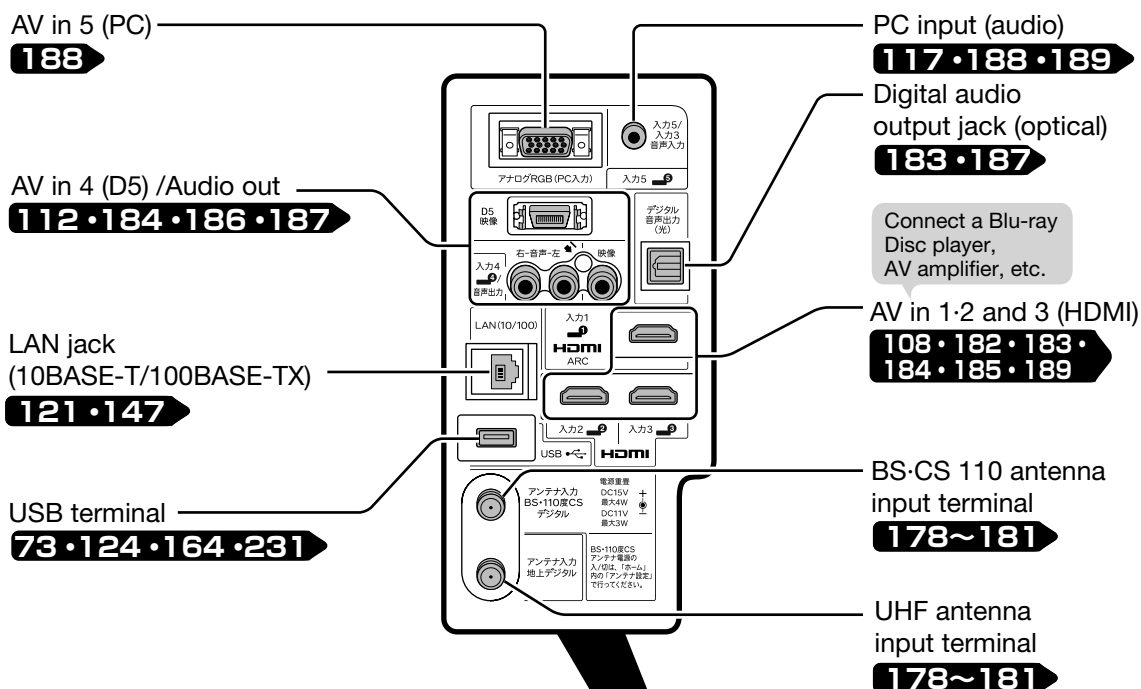

はじめに
お読みください

電源を入れる／
基本の使いかた

テレビを見る／
便利な使いかた

USBハードディスク
をつないで録画・見える

ファミリンクで使う／
レコーダーやパソコンをつなぐ

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や索引)

English
Guide

Remote Control Unit

Active/Standby **21**

Press to engage the TV set in the active or standby mode.

字幕 **Caption 42**

Press to display, select, or turn off captions when watching a digital program with captions.

静止 **Freeze 41**

Press to freeze the picture.

地上D **Terrestrial digital select 26**

BS **BS select 26**

CS **CS select 26**

When selecting the CS digital channel for the first time. **27**

消音 **Mute 26**

Press to mute audio.

+ **Volume up (+)/down (-) 26**

Press to adjust the volume.

データ連動

d **Linked data broadcast 28・150**

Press to call the data broadcast linked with the current digital TV program.

AVボジション

AV **AV mode select 47**

Press to select the picture/sound setting that best matches the current program.

録画リスト

録画 **Recording list 91**

Press to display a list of programs recorded onto a USB HDD or AQUOS recorder.

ファミリンク

ファミ **Familink 79・101・108**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

番組表 **EPG 31・84・104**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

番組情報

Program **info 41**

Press to display detailed information on the current digital program.

Finish

Press to finish menu operation, etc.

Recording **82~83・97・operation 102~103**

Press to record onto a USB HDD or AQUOS recorder.

Playback **91・92・operation 106**

Press to play a program recorded onto a USB HDD or AQUOS recorder.

オフタイマー

Sleep timer **57**

Press to select the remaining time period after which the TV set automatically enters the standby mode.

画面表示

Display **44・45・229**

Press to display or turn off the channel call, etc.

セーブモード

SAVE mode **65**

Press to change to the SAVE mode.

インフォメーション

Information **25**

Press to display the AQUOS Infomation.

Channel select **26**

• Press to select a channel.

インターネット

Internet **135・142・143 145・150・152**

Press to connect the internet.

チャンネル

Channel up (^)/down (v) **26・29**

Press to select channels in the ascending or descending order.

入力切

Input select **110・115・156**

Press to select the input.

ホーム

Display the "Home" Menu **23**

Press to start some useful operations of the TV.

ツール

Display the Tool Menu **23**

Cursor (up, down, left, right) **23**

Use to select a menu item, column, etc.

決定 **Enter/Confirm 23**

Press to confirm a selected setting or menu item.

Return

Press to go back to the previous screen.

青 赤 緑 黄

Color **28・32・70**

Use to operate EPGs and data program screens.

2画面

Split screen **38~39**

Press to switch between the split screen mode and the normal screen mode.

操作切

Operable screen **40**

Press to switch the operable screen when the TV set is in the split screen mode.

映像切

Picture select **42**

Press to select the desired picture when watching a digital multi-picture program.


音声切

Audio select **42**

Press to select the audio.

To open the cover

Hold the cover by the projections on both sides and lift upwards.



Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



1

Press
ホーム
and
select
with



Select “設定” (Setup) on
the Home menu.

ホームメニューから「設定」
を選ぶ



2

Select
with



Select “ (視聴準備)”
(View Setting).

「 (視聴準備)」を選ぶ



3

Select
with



Press



Select “Language(言語)”.
「Language(言語)」を選ぶ



4

Select
with



Press



Select “English”.
「English」を選ぶ

Enter.

決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5


Press



Finish this operation.
終了する

◇ おしらせ ◇

誤ってホームメニューを英語にしてしまったときは

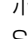- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

はじめに
お読みください

電源を入れる／
基本の使いかた

テレビを見る／
便利な使いかた

USBハードディスク
をつないで録画・見える

ファミリンクで使う／
レコーダーやパソコンをつなぐ

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や索引)

English
Guide